

EN



EasyStart Remote+ - connection to Hydronic, Hydronic II, Hydronic II C, Hydronic II Comfort, Hydronic M II, Hydronic S3 CL





EasyStart Remote+ - connection to Hydronic S3 CS (with S+ interface)





-B8 Room temperature sensor

EN

-E5 EasyStart Remote+ radio remote control

-H2 Button

- -W2 Antenna
- c to the heater
- g to the heater
- y Connect cables and insulate

Cable colours

RD	red	GY	grey	BK	black
BU	blue	YE	yellow	GN	green
WH	white	VT	violet	BN	brown

Installing the tab connector of the lead harness



Please note!

- When installing the connector, ensure that the locking tangs always face the middle of the connector. Only in this position to the tangs latch into the housing (see sketch).
- Please find further information on the devices installation and connection on the enclosed CD.

Connector housing pin assignment -XB12 for air and water heaters with LIN interface

Pin	Signal	Cable colour
1	Terminal 30 (plus)	RD
2	-	
3	Terminal 31 (minus)	BN
4	JE diagnostics	BU / WH
5	DAT	VT
6	Button LED (+)	RD / YE
7	Button (+)	BN / YE
8	Button (-)	BN
9	Temp (–)	BN / WH
10	Temp (+)	GY
11	-	

Connector housing pin assignment -XB12 for water heaters with S+ interface

Pin	Signal	Cable colour
1	Terminal 30 (plus)	RD
2	-	
3	Terminal 31 (minus)	BN
4	-	
5	DAT	VT
6	Button LED (+)	RD / YE
7	Button (+)	BN / YE
8	Button (-)	BN
9	Temp (–)	BN / WH
10	Temp (+)	GY
11	S+	YE

Connector housing chamber assignment (assignment seen from the cable inlet side)

Configure water heaters with S+ interface as additional device [AD] in the workshop menu

Use the symbol or button to select the flashing symbol in the Menu bar.



Confirm the SETTINGS menu item by pressing the
 button. The
 [SET THE TIME] symbol is displayed flashing.



- Press the LONGPRESS button for longer than 5 sec.; the service menu is displayed.
- Press the or button to select the item [12.1] and confirm by pressing the button.
- Use the solution of the select the flashing option [S1+].

SERVICE				
12.1: AD §1	+			

- Via the switch-on signal of the S1+ heater only the heat menu is displayed (no diagnosis function).
- Press the
 button to confirm the selection.
- Press the button to exit the workshop menu.



Please note!

To activate the function a reset of the system must be performed (remove the fuse).

Headquarters:

Eberspächer Climate Control Systems International GmbH Eberspächerstraße 24 73730 Esslingen info@eberspaecher.com www.eberspaecher.com